


New Flaps TO configuration menu for Takeoff Memo:

With this new feature you have the opportunity to change between following settings for T.O




If you leave both options "Deactive" you have the standart config (like known)

- Standart setting Flaps T.O = 1+F

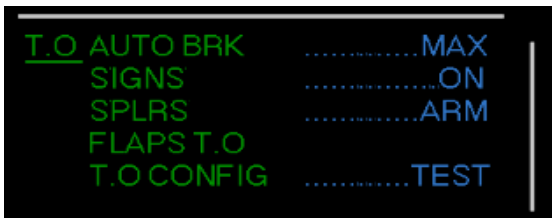

- If you activate "T.O. Memo TO FLAPS 2" you always have to move the flaps lever to flaps position 2 for Takeoff

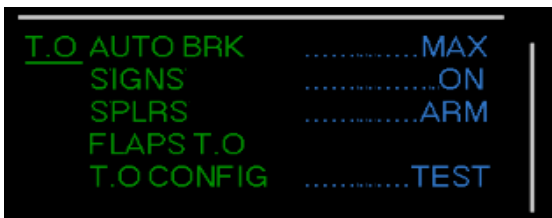

If you activate "Flap Memo by PM MCDU control" you can control the Takeoff Flaps setting from the **PM MCDU** Takeoff page (1+F,2 and 3). *This is the AST recommended option!* This option will overwrite the "T.O. Memo TO FLAPS 2" if active. If you not use values like 1+F / 2 / 3 in the mcdU Takeoff page the default setting 1+F is applied.

- PM MCDU Takeoff setting 1+F:

```

T.O AUTO BRK .....MAX
SIGNS .....ON
SPLRS .....ARM
FLAP T.O
T.O CONFIG .....TEST
    
```



- PM MCDU Takeoff setting 2:

```

T.O AUTO BRK .....MAX
SIGNS .....ON
SPLRS .....ARM
FLAP T.O
T.O CONFIG .....TEST
    
```



- PM MCDU Takeoff setting 3:

```

T.O AUTO BRK .....MAX
SIGNS .....ON
SPLRS .....ARM
FLAP T.O
T.O CONFIG .....TEST
    
```

